Original Gourmet®

Instruction Manual

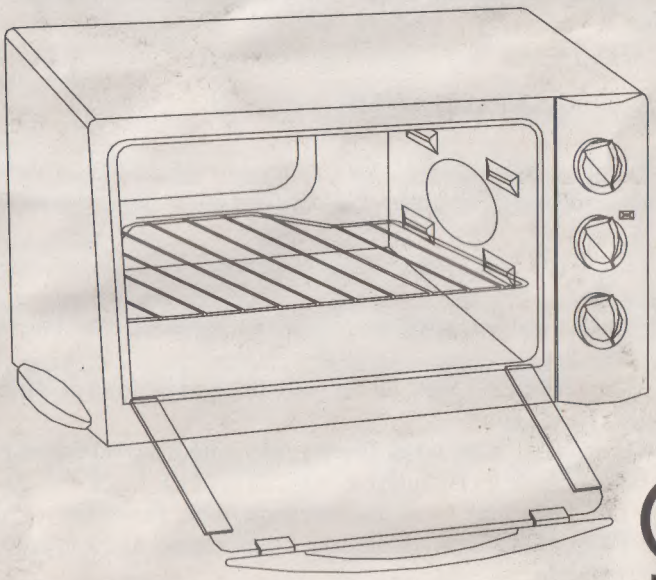

UL LISTED

Model OG20 - White Toaster Oven

Before Operating: Read And Understand All Operating Instructions!
Save This Manual For Future Reference!

OG20 Toaster Oven OWNER'S MANUAL

Introduction

Welcome to the quality of OG20 OVEN appliances. This Toaster/Oven/Broiler is designed to give you versatile service.
Please read all instructions before you use this appliance…these instructions will provide all the information needed for enjoyable, safe operation.
We have included a multi-use pan which will reduce cleaning of the Toaster/ Oven/ Broiler and removal of cooked food. Also, we provide a Timer (up to 30 minutes) that is used as the on/off switch for all functions toasting, broiling, and baking as desired. However, if more than 30 minutes cooking time is required for baking or broiling, the convenient "continuous on" position acts as the on/off switch.
Our intent is to make your life easy by providing a safe reliable product at outstanding value. Enjoy it.

IMPORTANT SAFEGUARDS

When using your electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric hazard and injury to persons, including the following:

1. Read all instructions.
2. Parts except handles and knobs will be very hot during use. Do not touch hot surfaces. Use handles or knobs…
3. To protect against electrical shock, do not place this unit in water or other liquid. See instructions for cleaning.
4. Close supervision is necessary when Toaster oven is used near children. Never let the Toaster Oven be used by children.
5. Unplug from outlet when not in use and before cleaning. Turn timer to "off" and ensure the indicating lamp is turned off before unplugging. Allow to cool before cleaning the appliance.
6. Do not operate this Toaster Oven when the power cord or plug is damaged or if the appliance malfunctions, is dropped or has been damaged in any manner. Return it to the Authorized Service Station for examination, repair, electric or mechanical adjustment.
7. The use of accessory attachments is not recommended by the appliance manufacturer, may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. The appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
15. Oversized foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
16. A fire may occur if theToaster Oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
17. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
18. Extreme caution should be exercised when using containers constructed of other than metal or glass.
19. Do not store any materials, other than manufacturers recommended accessories, in this oven when not in use.
20. Do not place any cardboard, paper or plastic inside the toaster oven.
21. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
22. Do not attempt to dislodge food when toaster is plugged in.
23. Do not place the baking pan or broiling tray on the lower heating element directly.
24. Use extreme caution when removing tray or disposing of hot grease.
25. FOR HOUSEHOLD USE ONLY.

SAVE THESE INSTRUCTIONS

SHORT CORD INSTRUCTIONS

A) A short power cord is to be provided to reduce the risk resulting from becoming entangled in tripping over a long cord.
B) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
C) If a longer detachable power-supply cord or extension cord is used:
   1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance; and
   2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

OPERATING INSTRUCTIONS

This Toaster/Oven/Broiler is equipped with all the options of a full-size oven in a countertop appliance; it toasts, bakes and broils.
NOTE: Initial start up operation may result in minimal smell and smoke (about 30 min.). This is normal, it is due to the protective substance on heating elements which protects them from salt effects during shipping from factory.

PARTS DESICRIPTION

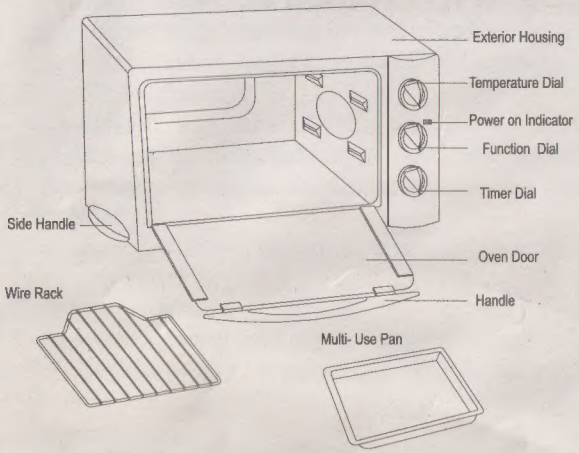

CONTROL PANEL

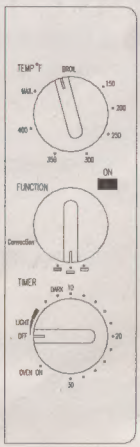

TOASTING

1. Open the Oven Door and place the bread on the Wire Rack up to 6 slices.
   NOTE -The wire rack slides out when the door is opened.
   -Remember to first remove the Multi-Use Pan.
2. Rotate the Function Dial clockwise to "Toast".
3. The Timer Dial is the on/off Switch.
   Choose your Crust preference by adjusting the Timer Dial clockwise to select light, medium or dark. To test the toasting of your type of bread, we suggest to start at medium setting (middle between light and dark) as bread varies according to humidity, thickness and texture. Each type of bread will toast differently according to these properties.
   - When the toast cycle is finished the bell will ring and the electrical power is automatically turned off
   - To stop the cycle at any time, turn the timer counterclockwise to "off" position and the bell will ring.
   - 6 slices will be lighter than 1 slice-adjust Timer accordingly.
   - Place 1 slice of bread in center of wire rack, 6 slices side by side

CAUTION: In this cycle both the top and bottom heating elements operate and glow red/orange.

BAKING

Place the food on the Multi-Use Pan and then place the pan on top of the Wire Rack in the oven. Close the oven door.
NOTE-We suggest to always preheat the oven at this setting before placing the food inside.

1. Rotate the Temperature Dial to the desired temperature.
2. Rotate the Function Dial clockwise to "Bake".
3. The Timer Dial is the on/off switch.
   After rotating the Temperature Dial to your desired temperature, then you must select the Timer Dial with the following options.
   a. For short time baking rotate the Timer Dial clockwise (up to 30 minutes). At the sound of the bell the bake function will turn off automatically.
   b. For longer time baking, rotate the Timer Dial counter-clockwise to "on" setting. The cooking will continue until the Timer Dial is manually turned to "off" position and the bell will sound.

CAUTION: In this cycle only the bottom heating elements operate.
NOTE-Always monitor the food at this setting to ensure that you are not overcooking.

Slow Cook

1. Place the food on the Multi-use pan and then place on top of the Wire Rack in the oven. Close the oven door.
2. Rotate the Temperature Dial clockwise between 200°F-350°F (90°C-180°C) position.
3. Rotate the Function Dial clockwise to "Bake".
4. Rotate the Timer Dial counter-clockwise to "ON" position. The oven will remain on until the Timer Dial is manually rotated to the "OFF" position.
5. This setting is useful for pot roasts etc. requiring long cooking time.

Useful Tips

1. Condensation will appear on the oven door for some foods and then disappear, this is normal.
2. Cook food immediately after defrosting.
3. Frozen foods and thick meat will take longer to cook.
4. When defrosting, do not place food in layers, place as a single layer on Multi-use pan.
5. Avoid opening the Oven Door too frequently to prevent heat loss.
6. When toasting, frozen bread or many slices should be at a darker setting than 1 regular slice.
7. When broiling, smoke will likely appear. Removing excess fat prior to broiling can reduce this. Always use Baking pan.

Care and Cleaning

1. Before using your Toaster/Oven/Broiler, wash all of the accessories-Wire Rack, Baking pan, in hot water with detergent or soap.
2. Initial start up operation may result in minimal smell and smoke about 15 min. This is normal, it is due to the protective substance on heating elements which protects them from salt effects during shipping from factory.
3. Always make sure that the appliance is unplugged and allow to cool before cleaning.
4. The Wire Rack can be removed for easy cleaning.
   Open the Oven Door and tilt upward slightly and pull the Wire Rack straight toward you until it slides out completely. Once the rack is removed, clean the interior with a damp cloth.
   To replace the Wire Rack, open Oven Door and tilt upward slightly and slide the rack into the two rack grooves at either side of the oven chamber and push straight to the back of the chamber. The exterior may be wiped with a damp cloth.
   REMEMBER: Do not place the entire unit in water or any liquid.
   DO NOT WIPE THE HEATING ELEMENTS - They are self cleaning!
5. Cleaning the Bottom of the Crumb door.

- This appliance has a drop open crumb door at the bottom of the oven chamber. First unplug this appliance and allow to cool down.
- To clean out the crumb door, simply tilt the unit backwards and pull down on the "crumb drop" on counter top.
  Washing of the interior of the crumb door is accomplished by placing the unit on its back side and allow crumb tray to fall forward for easy cleaning.
- DO NOT use the dishwasher to clean any accessories which are included with this product.
- DO NOT use any abrasive cleaning products.
- CLEAN accessories with a soft cloth in hot water with liquid Detergent or soap.
- After cleaning, close the access panel and check that it is locked securely into position.

CAUTION

1. TO PREVENT COUNTERTOP FROM BEING DAMAGED, THE TOASTER /OVEN/ BROILER MUST BE OPERATED WITH THE CRUMB DOOR IN PLACE, SECURELY CLOSED AND CLEANED OF EXCESS FOOD.
2. NEVER OPERATE YOUR TOASTER /OVEN/ BROILER WITH THE OVEN DOOR OPEN.
3. NEVER PUT THE BAKING PAN (OR ANY OTHER ACCESSORY) DIRECTLY ON THE TOP OF THE LOWER HEATING ELEMENTS.

Take Care

- Always leave at least 1 inch between the top of food and the top heating elements.
- Remove all plastic and paper from food, TV Dinners, etc. before Cooking.
- Always use oven mitts to remove multi-use pan after cooking.

Original Gourmet®

Limited Warranty

Coffee Pro (a division of Original Gourmet®) warrants this appliance (the "Product") against defects in materials and workmanship as follows:

1.) For a period of 90 days from the date of purchase, if this Product is determined to be defective in material or workmanship, Coffee Pro (a division of Original Gourmet®) will, at its option, repair or replace the product

2.) To obtain warranty service, you must contact our help line at (603)894-1200 or visit our Website at www.ogfc.net. After warranty status is determined, you will be given instructions on disposition. If the product is returned, it must be packed in its original carton.

3.) Proof of purchase in the form of the bill of sale or receipted invoice as evidence that the product is within the warranty period must be presented to obtain warranty service

4.) This warranty does not cover the cord set or any glass parts of the product

5.) This warranty does not cover damage due to:

- Failure to follow manufacturer's instructions
- Accident, misuse, abuse, negligence, acts of Gods, improper operation or maintenance, modification of or to any part of the product or the use of any unauthorized attachment on or to the product
- Connection to an electrical circuit not specified for the product
- Attempted repair by anyone other than Coffee Pro (a division of Original Gourmet®) or its agents
- Damage to returned product due to improper packing for shipment

6.) This warranty is valid only in the United States

7.) REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY, COFFEE PRO (A DIVISION OF ORIGINAL GOURMET®) SHALL NOT BE HELD LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE, FOR BREACH OF ANY EXPRESSED OR IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THIS WARRANTY

8.)Some states do not allow the exclusion or incidental or consequential damages or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you, this warranty gives you a specific legal rights, and you may have others rights which may vary from state to state

Coffee Pro (A Division of Original Gourmet®)
Tel: (603) 894-1200 • Fax: (603) 890-5359
WWW.OGFC.NET
Salem, NH 03079

REV 111209

MADE IN CHINA